Dipl.-Ing. Helmut Wiertalla, developed **for Alphatronic P2** or similar machine.

Prerequisite to NOTHING to create a CP/M diskette.

(update 10.jan.2019) Added: cpm43t7.bin

Do you have a technically **working Alphatronic P2** - or a similar machine - and some free **recordable Floppy-disks** (160kB, DD or better, 5 %"), then you can CP/M system disks and produce some key programs with few details even

easy! I will help you to help yourself!

- CODE1 2
- COLD FORMATTER
- create CP/M
- <u>Filetransfer</u> YMODEM
- V24 connect



1 Green=Printer, Red=V24 RS 232C


HARDWARE

To prepare, you need a <u>crossover cable</u> from the V24 Alphatronic P2, P2S or P2U (25 pol.) to a PC (eg WIN) and Internet access to this PC. For this to work, you must use the <u>red point for V24 connection</u>.

About my website important: For <u>step A)</u> or <u>step B</u>) a sufficient Alphatronic with 48kB memory expansion. Later, at the start of the newly <u>created TPA 100h a CP/M (cpm2p7t.bin)</u> diskette required 64kB memory expansion. Added yet, I create another new 48kB memory variant for cp/m and a lot of programs (TPA 4300h!) is cpm43t7.bin available!

http://www.wiertalla.de/AlphatronicP2.php

get yourself Alphatronic P2 - and MOS - documents (PDF) and some binary / files.

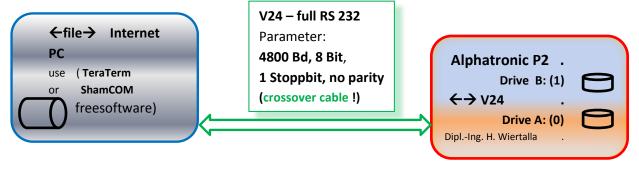


Hardware - Configuration

Software workshop:

You have no CP/M disk, or can not write to their floppy thing. I will help you to help yourself! Show to A.) or my WEB.

A.) Formatting a disk with a COLD Formatter. MOS CODE1 you keys in the RAM. If the Code1 was first started with the MOS, send the Formatter (yform2p.bin) per TeraTerm (Free-software, read user manual-binmode!). Then start the CODE 1 with the MOS U43000,FC00 (cr= Return Key). The eternal loop receives each character of the V24 and puts the character from 5000h and following in the memory.

These start with the "TeraTerm", send file in binary mode yform2p.bin the file. If everything is received (PC display), you can only cancel the Alphatronic P2 button HARD RESET.

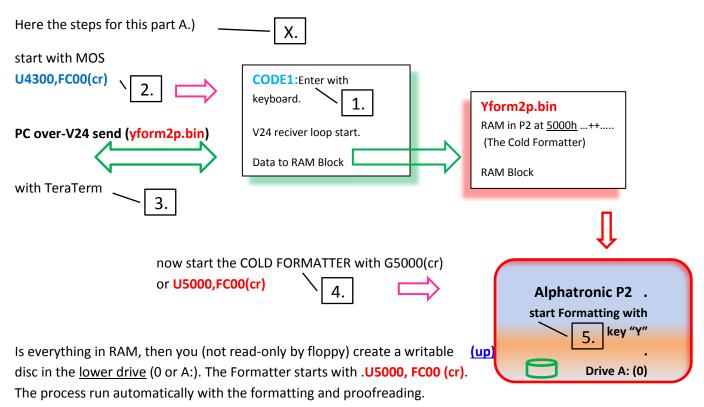

There are only two short messages. **ok - then you win**, otherwise **Error** - is what the disc or the device is not in order. **Repeate!** Then **any more new disks are formatted**. These hard reset key and restart with the MOS at **U5000,FC00** (cr) or **G5000** (cr). (up)

If they have permanet format mistake "Error / FEHL", they study workshop on my website. Check your Hardware and/or the Floppy disc drive (read- write heads or more).

END section FORMATTER (up)

Here the **handling** of the input CODE1 and / or CODE2 **via MOS**.

The Substitute .Shhhhcr MOS command it is begun. Of the . (Point comes from MOS) So S and following a hhhh: = HEXE input (0..9 or A..F), cr: = is the Return key. The displayed memory content can now be modified with a hex value. This is done with the BLANK button, the next memory cell is displayed, for example, be edited as before. Case A) is the value currently displayed and is to be no change, is incremented with BLANK (example below here _). Case B), it is also - a cell to go back (minus key). Return key ends At the conclusion is with cr. (see other description in MOS). Next the CODE-area is to get as an image from the Web Site (dowload show this)!

Before we sweep the input area with Fill: (red are the reactions eg MOS, blue input with key's)

.F4300,4400,0cr

Here we go: To try and the storage area to occupy on eg with 55h.

(Only the left column with .S generated - right column only for understanding)

.S4300cr CODE1	ADR : CODE	Symbo	olic instruction	<u>(up)</u>
4300:00-01_ 00-00_ 00-90_	4300: 01 00 90	LXI	B,9000h	;long
4303:00-21_ 00-00_ 00-50_	4303: 21 00 50	LXI	H,5000h	;start address
4306:00-1E_ 00-55_ 00-73_ eg	4306: 1E 55	MVI	E,55h	;Konstante
	4308: 73	MOV	M,E	;move to memory
only CODE (HEX)	4309: 23	INX	Н	;address++
input.	430A: 0B	DCX	В	;long
	430B: 78	MOV	A,B	
	430C: B1	ORA	С	;is .not zero. BC
	430D: C2 08 43	JNZ	4308h	;not finish
	4310: 21 00 50	LXI	H,5000h	;addaress start !!!
	4313: C3 50 43	JMP	4350h	;jump to V24 init and loop

.S4350cr CODE-1 the V24 init and loop


(reciver loop V24) (up)

```
4350:00-3E 00-91 00-D3 ←
                                       4350: 3E 91
                                                       MVI
                                                              A,91h ;Dummy
4353:00-05 usw.....
                                       4352: D3 05
                                                       OUT
                                                              5
                                                                     ;Port V24 command
                                       4354: 3e 40
                                                       MVI
                                                              A,40h ;Reset
                                       4356: D3 05
                                                       OUT
                                                              5
                                       4358: 3E 4E
                                                       MVI
                                                              A,4Eh ;Mod-cmd
                                       435A: D3 05
                                                       OUT
                                                       MVI
                                       435C: 3E 37
                                                              A,37h ;Mod-line
                                       435E: D3 05
                                                       OUT
                                       4360: DB 05
                                                       IN
                                                              5
                                                                      read STATUS Port
                                       4362: E5 02
                                                       ANI
                                                                     ;RxRdy for character
                                                              2
                                       4364: CA 60 43
                                                       JΖ
                                                              4360h ;loop
                                       4366: DB 04
                                                                     get data from Port
                                                       IN
                                                              4
                                       4368 77
                                                       MOV
                                                              M,A
                                                                      ;data to mem
                                       436A: 23
                                                       INX
                                                                      ;position++
                                                              Н
                                       436B: C3 60 43
                                                       JMP
                                                              4360h ;loop
```

. end cr in MOS -

update in Attention-line! CODE-2 .S4370cr (enter reciver block to Disk write mem block) 4370:00-2E 00-10 00-3E 4370: 2E 10 MVI L,10h ;LW 1 = drv upper, or LW0 =0 4373:00-84 00-11 00-00 4372: 3E 84 MVI A,84h ;Positions-CODE 4376:00-01_00-CD_00-14_ 4374: 11 00 01 LXI D,0100h ;RD sec=1,RE Track=0 !Attention! 4377: CD 14 08 CALL 814h ;disc driver 437A: DA 98 43 JC 4398h ;error jump 437D: 2E 10 MVI L,10h ;LW 1=upper, or LW0 =0 437F: 3E 83 MVI A,83h ;write code 4381: 01 00 50 LXI D,5000h ;memory address. 4384: 11 00 81 LXI B.8100h ;long BLOCK 4387: CD 14 08 CALL 814h ;disc driver 438A: DA 98 43 JC 4398h ;error jump 438D: 21 B8 43 LXI H,43B8h ;ok –Text 4390: CD 5E 00 CALL 5Eh ;Txt output 4393 : C3 55 00 **JMP** 55h jump to MOS ok 4398: 21 B0 43 LXI h,43B0h ;error -text 439B: CD 5E 00 CALL 5Eh ;text output 439E: C3 55 00 **JMP** 55h jump to MOS 43B0: 06 0D 0A 46 45 48 4C DB 06,13,10,"FEHL" ;for error . (up) 43B8: 04 0D 0A 6F 6B DB 04,13,10,"ok" ;04_long ok


B.) Preparing a CP/M diskette and equal to agree useful programs from me. The identical **CODE1** will now be expanded to include the small **CODE2** using the keyboard. The **CODE2** later with two <u>floppy disk driver</u> calling a block 129 setoren (per 256 byte) to a floppy disk drive in 1 or B: but here written. (up)

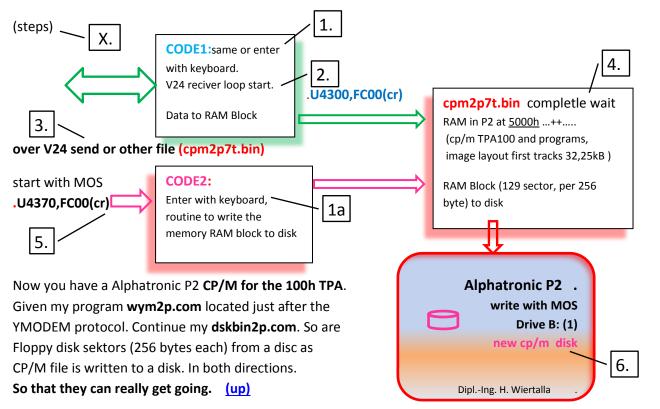

If you exchange the cpm2p7t.bin to cpm43t7.bin, then you create a CP / M for a TPA 4300h, so put them memory configuration of 48 kB RAM, with wym43.com. A zip –file for cp/m 4300h programs are ready.

C.) Filetransfer with the YMODEM protocol (wym2p.com on the cp/m disk TPA 100h)

If you have created a **new cp/m Alphatronic P2 disk**, use my wym2p.com (Ymodem protocol). In order to work with the identical V24 crossover cable as before, with the PC (batch transmission only from the Alphatronic P2) (WINDOW 7 or..) program **TeraTerm** or **better ShamCom**. For this they get a <u>guide program</u> to **wym2p.com** from my website. The most important basic functions of the file transfer from the PC to Alphatronic P2 and in the other direction. Please study my instructions. (up)

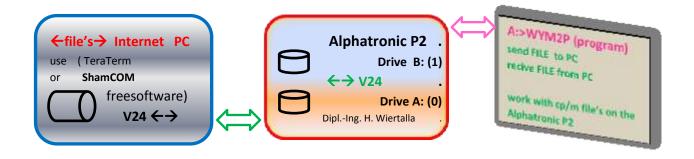


Connected to the world


Now I have helped you - to help himself.

```
0550: 00 00 00 00 00 00 00 00 00
0560: 00 00 00 00 00 00 00 00 00 00
0570: 00 00 00 00 00 00 00 00 00 00 00 00
              phatronic P2
C>SAVE 4 YFORM2P.BIN
C>WYM2P
set 4800 uym (mini-YMODEM) 1.07 -hu 22-Aug-2015
-s C:file>YFORM2P.* s send from Alphatronic P2 starting
  06: files
yform2p.mac 18432 :::::::::::::
yform2p.rel 1792 ::
yform2p.com 1024:
 yform2p.bak 17408 ::::::::::::
 yform2p.sym 640:
 yform2p.bin 1024 :send ok
          ( Remote work PC with ShamCom, fine)
       Dipl.-Ing. H. Wiertalla
```

V24 cross-over cable

You must have a V24 cable from Alphatronic P2 (red point) to a PC (V24). This cable must like as this shown here. My part is on the left (semilar "Drehteil" see) (up). The accessories - like V24 cable or converter USB to V24 are easily available in the trade. Or you build yourself a lot.

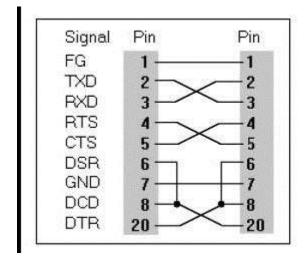

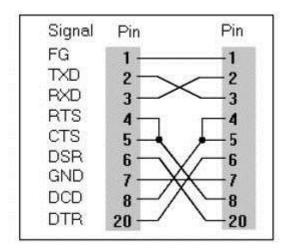


Much success of Alphatronic P2 owners and similar systems. (up)





Verify the CODE1 and CODE2 (up)

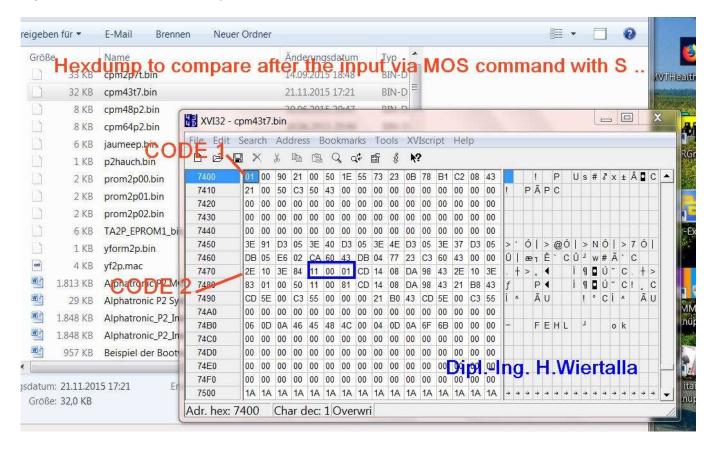

It would be nice if I would sometimes hear of your successes.

Who wants me via e-mail to find me, find me by search engines. (up)

http://www.wiertalla.de/AlphatronicP2.php